



User Manual

SteriClick Rechargeable Waterproof Keyboard with Touchpad


Tel. +61 3 9046 8507

Email: info@stericlick.com.au

www.stericlick.com.au

Copyright (c) 2016 STERIClick PTY. LTD. ACN 615 700 948

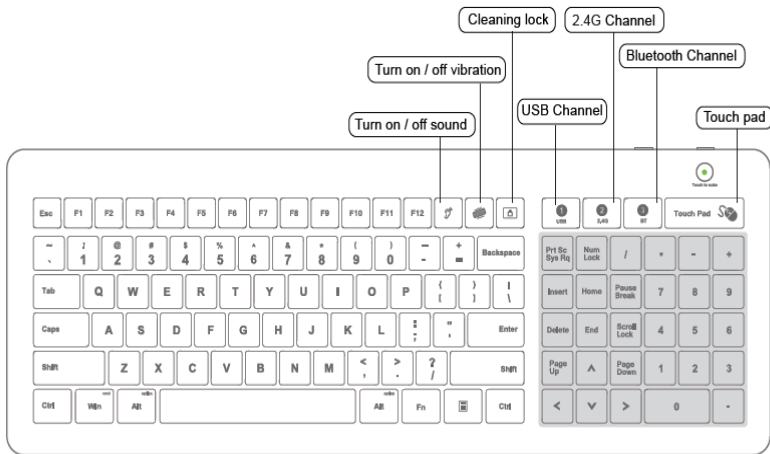

INTRODUCTION OF LAYOUT



Sound Volume: Turn up sound  + 


Turn down sound  + 

Vibration Switch: Turn up vibration  + 

Turn down vibration  + 

LOCATION OF PARTS AND CONTROL


1. Power Button
2. USB Interface
3. Touch To Wake
4. Indicator Light
5. Manual
6. USB Cable

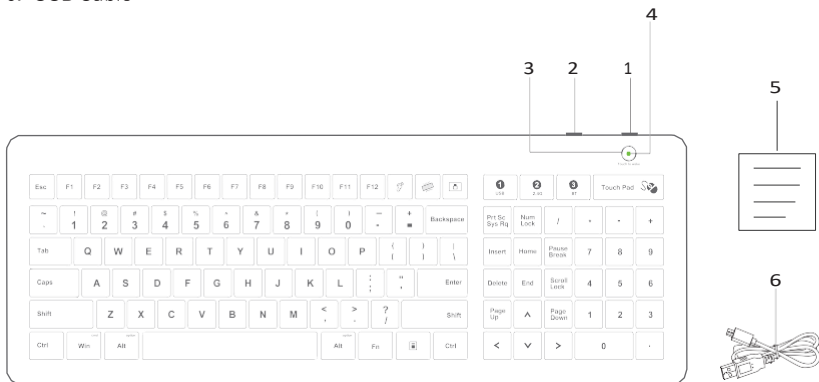

HOW TO WORK


The Medical Waterproof Keyboard is ready to work before leaving the factory. (not fully charged for the safety of transportation, it is advised to fully charge it before your operation) It can be connected with multiple device in three ways (USB Cable, 2.4GHz Wireless Adapter, or Bluetooth mode optional)

BLUETOOTH MODE


1. Power on your device.
2. Press the Power button on the Bluetooth keyboard to turn on the keyboard. The power LED will illuminate.
3. Long press the Bluetooth button () until the indicator light flashes, then release.
4. Click the Settings icon on your device.
5. Search and select “Bluetooth” on your device’s “General” menu.
6. On the subdirectory of “Devices” , select “Device name”
7. The Medical Waterproof Keyboard should now show connection on your device’s menu.
8. If your device goes into standby mode, the Bluetooth Keyboard should still be synced. If you power-off your device, you may need to re-sync it. If you use the Bluetooth Keyboard with a new device, or it doesn’t connect properly, follow the steps above to re-sync.

USB MODE


Deploy by USB Cable (Cable included) : If deploying by USB cable, just plug it in, press the

“USB” key (), and start typing. Connection is confirmed by a steady LED indicator.

Warm Notice:


1. Easy to use, the keyboard's "2.4GHz Channel" () is connected to Free Pair USB adapter with factory default setting. You just need to plug in adapter to computer, to play for your first time to use it.
2. If the 2.4GHz connection fails, you need to reconnect, please click on "Free Pair Software", according to the interface prompts to complete the pairing.

SLEEP MODE


- To prolong the battery lifetime, the Medical Waterproof Keyboard will go into sleep mode after 10 minutes of no operation.
- The keyboard will awake from sleep mode by touching the button ()

TOUCHPAD GESTURE GUIDE


The Medical Waterproof Keyboard Touchpad area support multi-finger gestures as below:

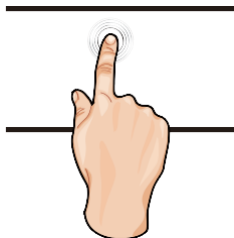

One-finger gesture will move the cursor around the screen.

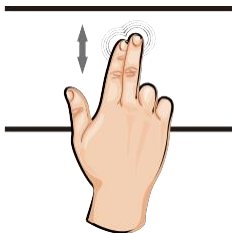


Two-finger gesture will scroll the page.

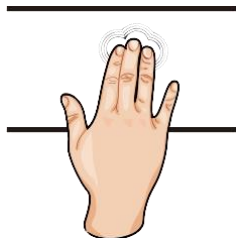

Three-finger gesture will drag an object around the screen.

CHARGING THE KEYBOARD

- Plug the USB cable (included) into the keyboard USB Type C port and then the keyboard goes into the USB outlet mode.
- The charging LED light will illuminate in red during charging. The LED light turns in green when the battery is fully charged.
- The keyboard takes approximately 4 hours to be fully charged.
- The power led indicator() will blink when the Keyboard's battery needs recharging.

BATTERY REMINDER

- 60%-100% : Green LED light
- on 20%-60% : Yellow LED light
- on Less than 20% : Red LED
- flash Charging : Red LED light
on
- Charge completed: Green LED light on

CARE AND MAINTENANCE

- Ensure to turn off the keyboard when you have finished operation on it. This help to extend the battery life time.
- No heavy object is allowed to be put on the keyboard, which may cause damage to it.
- The screen is made of glass. Please avoid dropping, strong impact and severe vibration. Wipe the exterior of the Bluetooth keyboard with soft cloth.
- Please fully charge the Bluetooth keyboard before using it after the long period of storage. Do not store it in the extreme cold or hot environment, or put it under direct sunlight.

SPECIFICATIONS

- Model No.: SteriClick Wireless Touch
- Dimensions: 436X160X20mm
- Button size: 18X18mm
- Color: White
- Material: Tempered glass+ABS
- Connection method: USB, Bluetooth and RF
- Support system: Android, Windows, macOS



Contact us:

Tel. +61 3 9046 8507

Email: info@stericlick.com.au

www.stericlick.com.au

Copyright (c) 2016 STERIClick PTY. LTD. ACN 615 700 948